
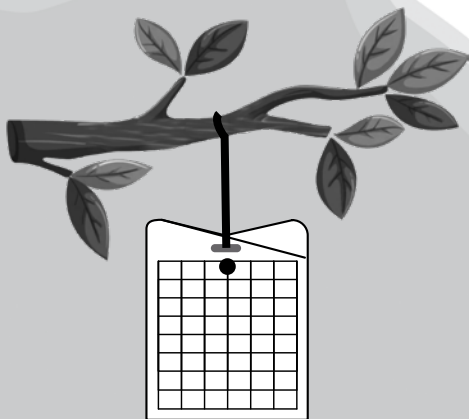
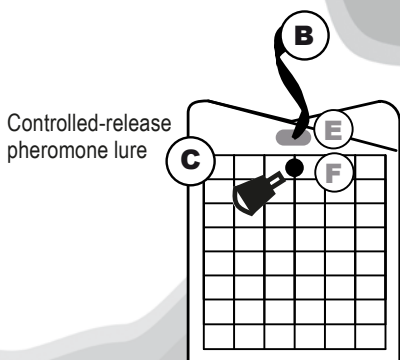


SAN JOSE SCALE KIT ASSEMBLY INSTRUCTIONS

Product No. 3013SJS

Components:

- A.** Trap card
- B.** Twist-tie
- C.** Pheromone lure

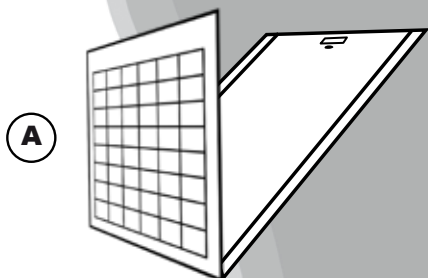

How to assemble:

1. Remove one trap card, one twist-tie, and one lure packet from the from the bag.
2. Fold trap inside out so that the grid and glue are on the outside.
3. Push out die-cut perforations at the top of the trap and insert one end of twist-tie into Hole E and fasten securely.
4. Insert the pheromone lure into Hole F until secure.

Note to user:

To prolong storage life, refrigerate or freeze unused dispensers in their foil packets.

To avoid contamination, use tweezers or rubber gloves when handling dispensers.



solida.ca

info@solida.ca

418-826-0900